

SPEED & PRECISION FOR LARGER PARTS



PRODWAYS
INNOVATIVE TECHNOLOGY

ProMaker L6000

WWW.PRODWAYS.COM

A UNIQUE SOLUTION FOR MANUFACTURING


ProMaker L6000 was designed to produce small parts in large quantities or highly detailed large parts at speeds unseen in the 3D printer arena. With our patented MOVINGLight® technology, incredibly high resolution and precision can be achieved over the entire build platform (twice the size of the L5000 build platform), delivering high productivity.

LOWEST OPERATING COST WITH NO COMPROMISE ON PERFORMANCE

Due to minimal wear-and-tear on machine parts, ProMaker L6000 has very low operating costs without compromising performance. The result is very low cost per unit production, satisfying the most stringent demands for profitability. Compatible with 365-nm UV resins, the ProMaker L6000 is ideal for a wide variety of applications, no matter how demanding the requirements.



MOVINGLight® TECHNOLOGY: UNPARALLELED SPEED AND PRECISION IN 3D PRINTING

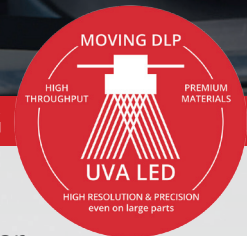

- **Unmatched resolution:** less than 40 µm with hundreds of millions of pixels per layer
- **High precision:** achieve incredibly fine detail over the entire build platform with no distortion
- **Unparalleled speed:** production up to 10X faster than market standards
- **High throughput:** achieve high production volumes without sacrificing quality
- **Superior surface quality:** minimal post-production finishing required
- **Lower operating cost:** minimal wear-and-tear on machine and less costly LED light source

ProMaker L6000 TECHNICAL SPECIFICATIONS

Net build volume	800 x 330 x 400 mm 31 x 13 x 16 inches
Number of heads	1
Footprint (LxW)	3380 x 3140 mm (10.6m ²) 134 x 124 inches (114 sq. ft.)
Native resolution (X, Y, Z)	605 x 605 x 1016 DPI ~40 µm (0.0016 inches)
Layer thickness	25 - 150µm 0.001 to 0.006 inches
MOVINGLight® heads	1920 x 1080 pixels
Platform	Perforated
Size (LxWxH)	2285 x 1266 x 2230 mm 90 x 50 x 88 inches
Weight	1900 Kg 4180 lbs.
VAT Volume	~192 L 51 US Gal
Power requirements	100 - 127 VAC, 50 A, 60 Hz 220 - 240 VAC, 25 A, 50 Hz
Workshop compatibility	Windows 7/8
Certification	CE

By choosing one of our ProMaker machines, you're also accessing our vast technical knowledge and a wide range of available services to help optimize production and maximize profitability.
TRAINING • MAINTENANCE • HOTLINE AND ON-SITE ASSISTANCE • SPECIFIC DEVELOPMENT

PRODWAYS
THE NEW WAY OF PRODUCING

ZI Les Garennes - 1-3, rue Chappe 78130 les Mureaux | Tel: +33 (0)1 30 90 44 12 | www.prodways.com

Photos: ©Prodways - ©Thinkstock - ©Shutterstock - V. 02.06.2016
 ©Prodways 2015 - The information contained in this document is not contractually binding and may not be reproduced without prior approval.

A COMPANY OF
Gorgé
 GROUPE

FOLLOW US
 ON TWITTER
 @prodways